




E I C H H O L T Z

112334 CABINET FLORENCE

ASSEMBLY INSTRUCTION


**PARTS**

2x




(A)

2x



(B)


1x



(C)


1

WALL

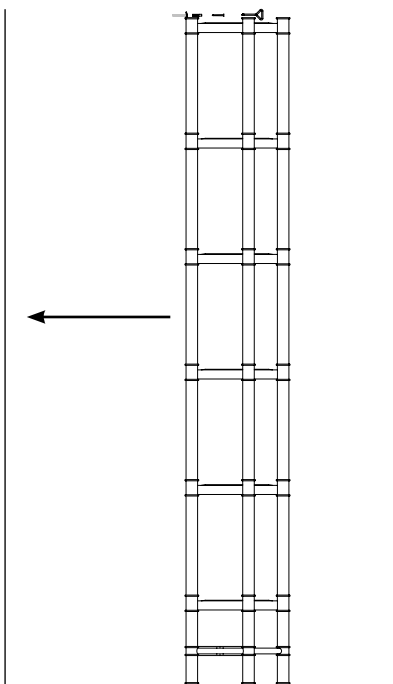


**ZOOM**

WALL

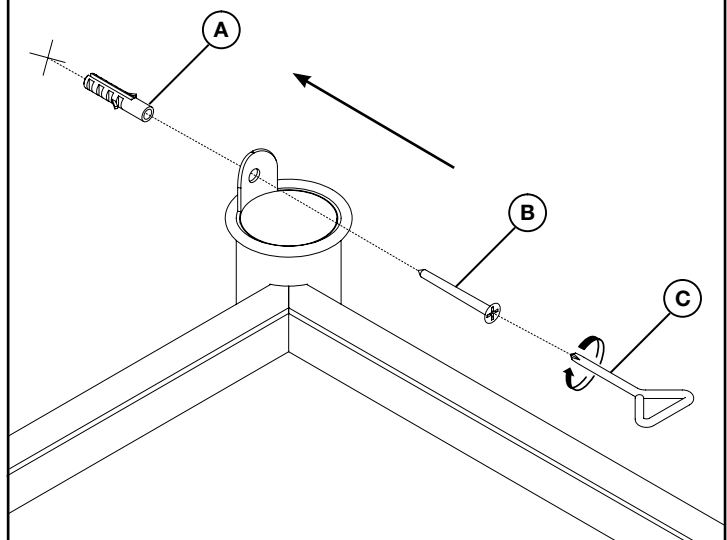

**SIDE VIEW**

WALL

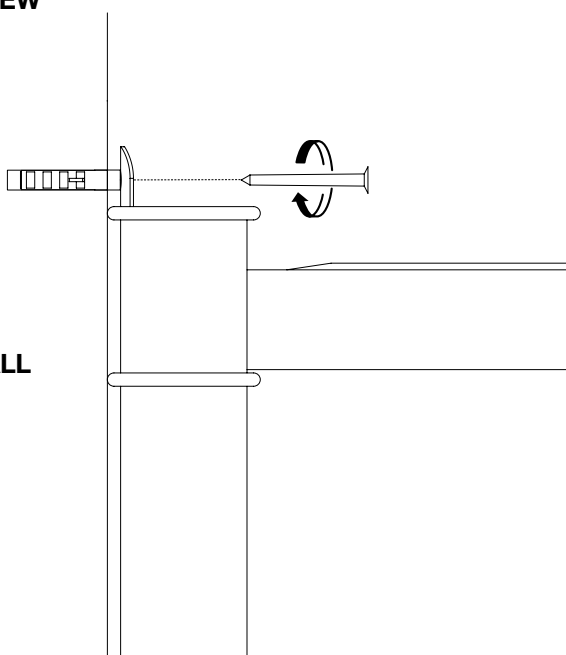

**FINAL**

